



**MANUAL DE INSTRUCCIONES
CORTADORA DE CABELLO
ED-5185**



ESTIMADO CLIENTE


Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.

Si necesita soporte adicional, no dude en escribir a: info@premiermundo.com



ÍNDICE

INSTRUCCIONES DE SEGURIDAD	2
RECOMENDACIONES	2
DESCRIPCIÓN	3
INSTRUCCIONES DE OPERACIÓN	4
CABEZA GIRATORIA	5
BATERÍA RECARGABLE	6
GUÍA DE PEINILLA	6
LIMPIEZA Y MANTENIMIENTO	6
ALMACENAMIENTO	6

	PRECAUCIÓN RIESGO DE CHOQUE ELÉCTRICO , NO ABRA	
<p>Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.</p>		
	<p>Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.</p>	
	<p>Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.</p>	

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA

Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.


INSTRUCCIONES DE SEGURIDAD

- Verifique que el voltaje de la unidad corresponda con el del área donde la desea conectar.
- Utilice la unidad únicamente para propósitos domésticos.
- No utilice la cortadora cerca de la tina, la ducha o el lavamanos, u otros contenedores con agua.
- No utilice la cortadora con las manos mojadas. Si la unidad se moja, desconecte inmediatamente el cable.
- No deje la cortadora sin supervisión cuando lo esté utilizando.
- Utilice la cortadora únicamente para el propósito para el cual fue diseñado.
- Este producto no debe ser utilizado por personas con capacidades físicas o mentales reducidas, por falta de experiencia y conocimiento, a menos que reciban instrucción y supervisión de parte de una persona experimentada.
- Este producto no es un juguete. Manténgalo fuera del alcance de los niños.
- Retire el empaque del producto y no permita que los niños jueguen con él.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.

RECOMENDACIONES

- De vez en cuando observe el cable en búsqueda de daños. No utilice la cortadora si el cable de poder muestra alguna falla.
- No introduzca la unidad en agua ni en otros líquidos.
- No coloque la cortadora cerca de superficies calientes.
- Si el cable de poder está dañado debe ser reemplazado para evitar un mal funcionamiento y accidentes. Póngase en contacto con un técnico calificado.
- No utilice la unidad en el exterior y consérvela en un entorno seco.
- No utilice accesorios que no sean los recomendados por el fabricante.
- No utilice un conector diferente al que se proporciona con la unidad.
- Desconecte el cable halando del enchufe, pero no del cable.
- No enrolle el cable alrededor de la cortadora y no lo doble. Asegúrese de que el cable de poder no entre en contacto con partes calientes de la cortadora.
- La cortadora no está diseñada para ser utilizada con algún tipo de sistema control remoto.
- Coloque la unidad siempre sobre una superficie plana. Asegúrese también de no cubrir la unidad con nada.
- Desconecte el cable del tomacorriente cuando no esté utilizando la unidad.
- El uso inadecuado de este producto puede causar daños y lesiones personales.
- Este producto cumple con los estándares correspondientes.

DESCRIPCIÓN

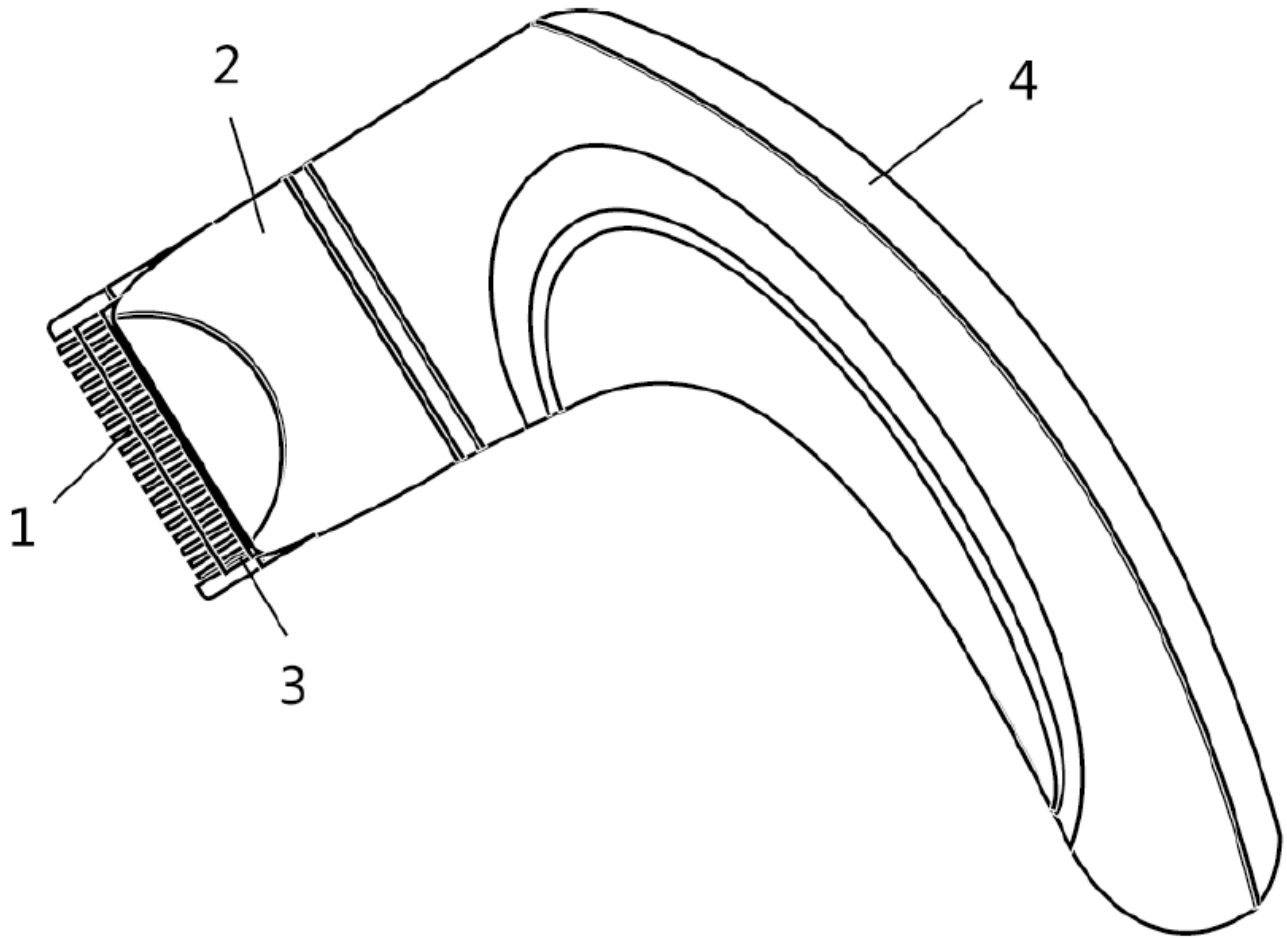

- 1. Cuchilla inferior
- 2. Cabeza desarmable
- 3. Cuchilla superior
- 4. Interruptor

Voltaje: 220V – 240V / 50Hz con adaptador AC/DC

Potencia: 3W

Tiempo de carga: 45 min

INSTRUCCIONES DE OPERACIÓN

Antes de comenzar, peine su cabello.

1. Presione el botón de encendido en la cortadora.



2. Ajuste la posición de la cabeza giratoria para contornear fácilmente.



3. Mueva la cortadora a través del cabello lentamente. La primera vez que corte el cabello, corte sólo una pequeña parte hasta que esté acostumbrado.



4. Para hacer el contorno de la línea del cuello y las patillas, gire la cortadora y haga cortes hacia abajo.




CABEZA GIRATORIA

Para retirar la cabeza de la cortadora asegúrese que está en posición de apagado.

Retire la cabeza giratoria.



Inserte la cabeza en dirección de las manecillas del reloj o al contrario.

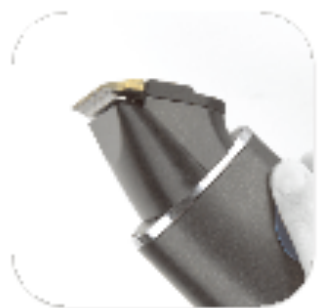

La cabeza giratoria tiene cuatro posiciones principales de corte.



Accesorios.



BATERÍA RECARGABLE

Antes de utilizar la cortadora por vez primera, debe estar completamente cargada.

1. Coloque el interruptor en la posición de apagado.
2. Conecte el adaptador a la cortadora y al tomacorriente.

Usted puede extender la vida útil de la batería con el siguiente procedimiento: una vez al mes utilice la cortadora hasta que la batería se descargue por completo. Coloque el interruptor en la posición de apagado y recargue la batería en la noche.

GUÍA DE PEINILLA

Utilice la guía de la peinilla para cortar el cabello de manera uniforme. Para ajustar la longitud deseada, inserte el borde del accesorio de la peinilla en la cabeza giratoria. Asegúrese que el accesorio encaje adecuadamente.

LIMPIEZA Y MANTENIMIENTO

1. Apague la unidad y desconecte el cable de poder.
2. Retire el accesorio de peinilla.
3. Limpie los residuos de cabello que se hayan albergado en las cuchillas y en el accesorio de peinilla.

ACEITAR

- Aceite la cabeza giratoria de vez en cuando si utiliza la cortadora con regularidad. Utilice un aceite especial para este tipo de productos.
- Retire el accesorio de peinilla.
- Aplique una o dos gotas de aceite entre los dientes de corte.
- Encienda la cortadora por un momento y luego apáguela para distribuir el aceite.
- Retire cualquier exceso de aceite con una prenda.

ALMACENAMIENTO

- Asegúrese de que la cortadora está completamente fría y seca.
- No enrolle el cable alrededor de la unidad para evitar que se troce.
- Mantenga la unidad en un espacio limpio y seco.

• Las personas y/o Marcas registradas en este manual de instrucciones no están afiliadas a Premier Electric Japan Corp. y aparecen en este Manual con propósitos ilustrativos únicamente.



**INSTRUCTION MANUAL
HAIR CLIPPER
ED-5185**







DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to info@premiermundo.com




	CAUTION RISK OF ELECTRIC SHOCK, DO NOT OPEN	
<p>Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.</p>		
	<p>This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.</p>	
	<p>This sign means that there are important instructions of operation and handling in the manual that comes with this device.</p>	

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE

This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

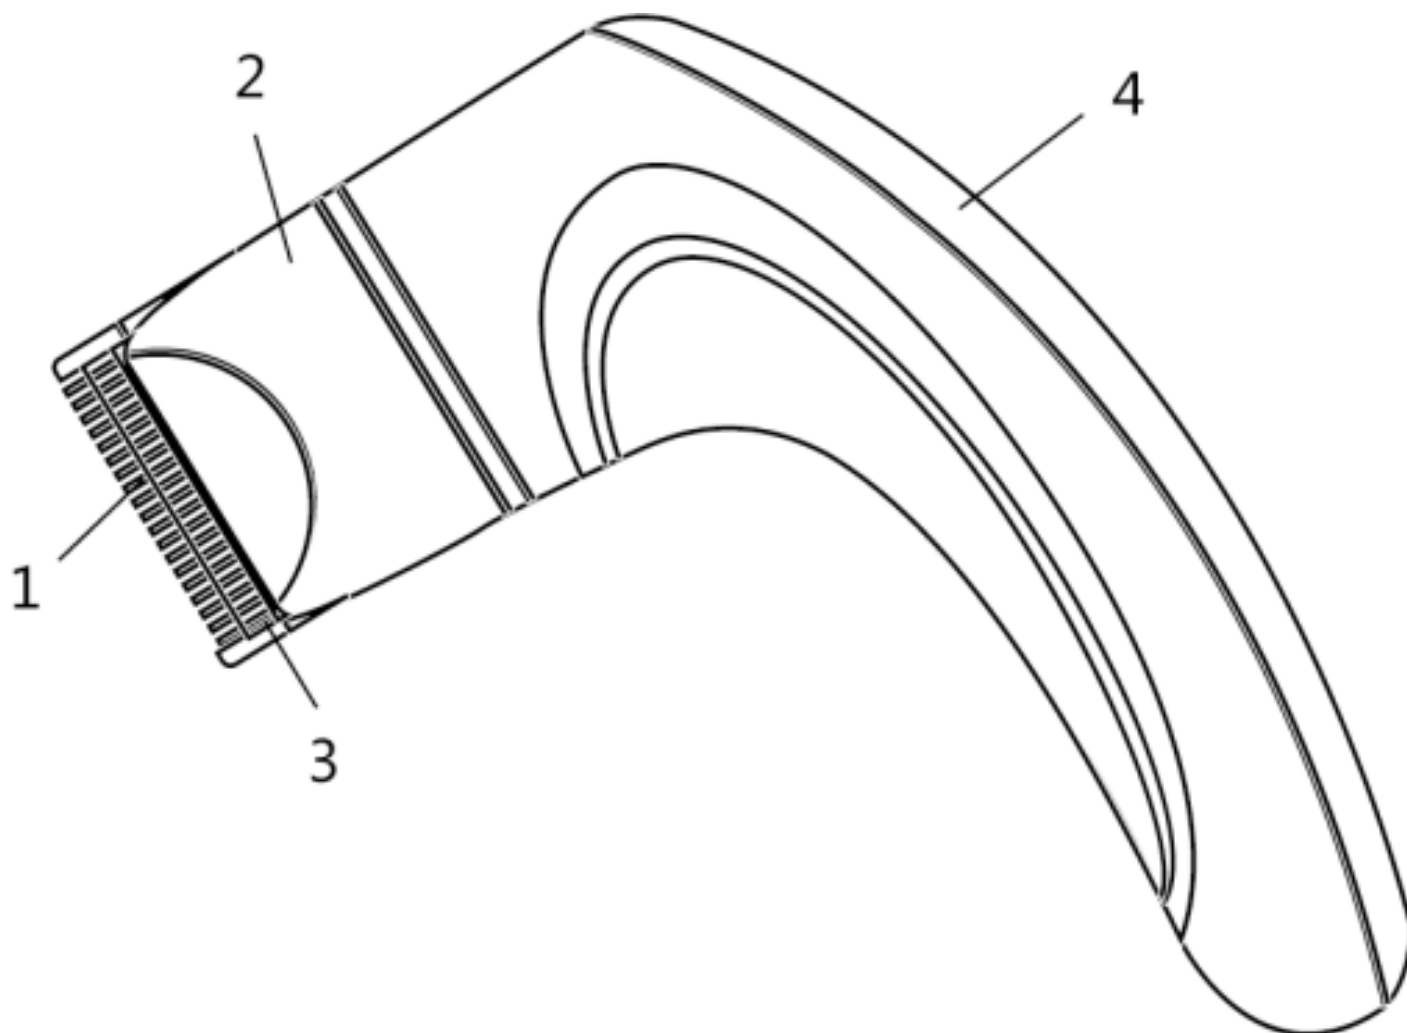

- 1.BOTTOM BLADE
- 2.DETACHABLE HEAD
- 3.TOP BLADE
- 4.SWITCH

VOLTAGE:220V~240V 50Hz
by AC/DC adapter

POWER:3W
Charging time: 45 min

IMPORTANT SAFEGUARDS:

Please read these instructions carefully before use.

Keep present instructions for future references.

Check that your mains voltage corresponds to that stated on the appliance.

Only use the appliance for domestic purposes and household or similar applications such as:

- staff kitchen areas, in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments

Only use the appliance in the way indicated in these instructions.

Never use this unit near bathtub, shower, wash-hand basins or other containers with water.

Never use this appliance near water projections.

Never use this appliance with the wet hands.

If unfortunately the appliance is wet, immediately withdraw the cord of the socket-outlet.

Inform potential users of these instructions.

Never leave the appliance unsupervised when in use.

The appliance must be used only for its intended purpose. No responsibility can be taken for any possible damage caused by incorrect use or improper handling.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

This device is not a toy; do not leave small children or people with disabilities to play with.

In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

Caution! Do not allow small children to play with the clipper:

DANGER:

Never use the appliance if cord or appliance shows any signs of damage.

Never immerse the appliance in water or any other liquid for any reason whatsoever.

Never place it into the dishwasher.

Never use the appliance near hot surfaces.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly Competent qualified person (*) in order to avoid a hazard.

Disconnect the power source cable before any operation of cleaning of maintenance and accessories assembly.

Never use the appliance outside and always place it in a dry environment.

Never use accessories, which are not recommended by the producer. They could constitute a danger to the user and risk to damage the appliance.

Never use any other connector than the one provided.

Never move the appliance by pulling the cord. Make sure the cord cannot get caught in any way.

Never wind the cord around the appliance and do not bend it

Ensure that the power cord does not come into contact with hot parts of this unit.

Make sure the appliance never comes into contact with flammable materials, such as curtains, cloth, etc...& the power cord and plug do not come in contact with water.

This appliance is not intended to be operated by means of an external timer or separate remote-control

system.

Do not cover the device and do not put anything on it.

Always remove the plug from the wall socket when the appliance is not in use.

When using an extension lead always makes sure that the entire cable is unwound from the reel.

Incorrect operation and improper use can damage the appliance and cause injury to the user.

This device complies with standards relating to this type of product.

Competent qualified person: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs.

Rechargeable Battery

OPERATING INSTRUCTIONS

Preparing for Hair Clipping

Comb your hair with a styling comb



Press the on/off button to switch on the clipper.



Move the clipper through the hair slowly. The first time you cut hair, cut only a small amount of hair until you are accustomed.




Adjust the position of the rotating head to make contouring easier.



To contour the neckline and the sideburns, turn the appliance and make downward strokes.

ROTATING HEAD

To remove head set from the clipper, make sure the on/off button is in the "O" position.

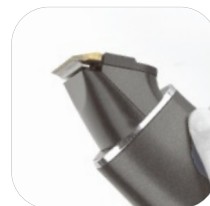

Pull the head off



The rotating head has four primary cutting positions



Accessories

Rechargeable Battery

Before first time use, the hair trimmer must be fully charged.

1. Slide the On/Off switch downwards.
2. Insert the plug of the mains adaptor into the power jack of the hair clipper.
3. Plug the mains adaptor into a power socket outlet.

Ni-cad battery life may be extended with the following procedure: once every month, let the clipper run until the motor stops. Move the switch to the "OFF-0" position and recharge fully overnight.

Guide comb

Use the guide comb to shorten hair evenly. To set the desired length, insert the edge of the comb attachment into the swivel head. Make sure the comb attachment locks into position properly.

Clean & Maintain

1. Switch off the appliance and disconnect it from the mains.
2. Remove the comb attachment.
3. Clean any loose hair that has collected in the blades and comb attachment.

Oiling

Oil the shaving head from time to time if you use the trimmer regularly. Use non-corroding oil, for example sewing machine oil.

1. Remove the comb attachment used.
2. Apply one to two drops of oil between the cutting teeth.
3. Turn the trimmer briefly on and then off again to distribute the oil.
4. Remove any excess oil by wiping with a cloth.

STORAGE

- Ensure the appliance is completely cool and dry.
- Do not wrap the cord around the appliance, as this will cause damage.
- Keep the appliance in a cool, dry place.

The characteristics can change without preliminary preventing

For additional protection, the installation of a residual current device with a rated residual operating current not exceeding 300 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

Always unplug the appliance before any cleaning or maintenance operation and accessories assembly.

CAUTION: If the electric cable is damaged, it must be replaced by the manufacturer, his after-sales service or people with similar qualification, in order to avoid any danger. In order to minimize the risks of electric shock, In the event of breakdown, not to open the case but to call upon a qualified technician for repairs.